

Booster Chain for Rivetless Chain



A booster chain for rivetless chain is used for driving a rivetless chain by catching the rivetless chain by the dogs on the booster chain. Rivetless chain is the general name of the X chain for trolley conveyor or power & free conveyor.

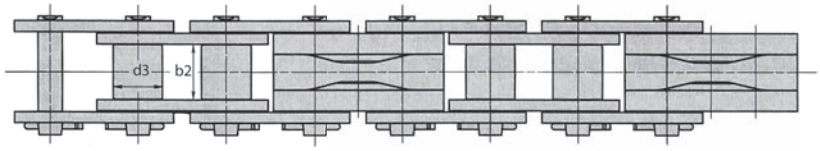

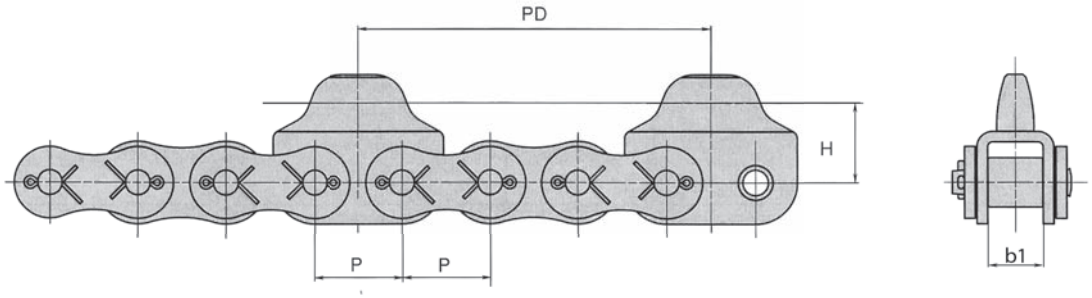



Unit (mm)

Chain No.	*Rivetless chain to be used No.*	*Pitch P*	*Inner width b1*	*Roller dia. d3*	*Dog pitch PD*	*Chain clearance H*
BC X348	X348	50.8	31.55	28.58	304.8	41.2
BC X458	X458	50.8	31.55	28.58	203.2	44.4
BC X678	X678	50.8	31.55	28.58	304.8	54.0